



Cricket Datasheets

Resetting Your Cricket Scoreboard

At the end of a game, or before the start of a new game you will want to reset your cricket scoreboard, so that everything reverts back to zero.

This procedure is simple:

Press FN and Reset together

Once done, all scores will change back to zero and you can start again.

In accordance with the Company's policy of continuous development, Boyd Sport & Play Ltd t/as sportsequip.co.uk reserve the right to alter or amend specifications without prior notice. All statements in this datasheet are made in good faith but the Company will not be held responsible for any consequence arising out of errors or omissions.

sportsequip.co.uk

The Manor, Tur Langton, Leicestershire, LE8 0PJ

t: 01858 545789 | f: 01858 545890 | e: info@sportsequip.co.uk

sportsequip.co.uk and Astroturf® are registered trademarks © sportsequip.co.uk 2025

