



## Cricket Datasheets

### Setting the Channel on your Cricket Scoreboard

Each electronic scoreboard has to talk to its controller through a radio frequency channel. These can be set and are most frequently used when using multiple different scoreboards in a small area.

Once this has been set you should not need to change it again.

If you have a [9 Digit Cricket Scoreboard](#):

1. Make sure both the scoreboard and the controller are on.
2. Use the following combinations to set the channel:
  - Channel 0 (Default): FN & -1
  - Channel 1: FN & +1
  - Channel 2: FN & +4
  - Channel 3: FN & +6
3. The scoreboard will display 'CH' and then the channel number in the total section. This will then disappear and you are good to go.



If you have any other [Cricket Scoreboard](#):

1. Make sure both the scoreboard and the controller are on.
2. Use the following combinations to set the channel:
  - Channel 0 (Default): FN & Bat #1 No.
  - Channel 1: FN & Bat #2 +1
  - Channel 2: FN & Bat #2 No.
  - Channel 3: FN & Bat #1 +1
3. The scoreboard will display 'CH' and then the channel number in the total section. This will then disappear, and you are good to go.



In accordance with the Company's policy of continuous development, Boyd Sport & Play Ltd t/as sportsequip.co.uk reserve the right to alter or amend specifications without prior notice. All statements in this datasheet are made in good faith but the Company will not be held responsible for any consequence arising out of errors or omissions.

[sportsequip.co.uk](http://sportsequip.co.uk)

The Manor, Tur Langton, Leicestershire, LE8 0PJ

t: 01858 545789 | f: 01858 545890 | e: [info@sportsequip.co.uk](mailto:info@sportsequip.co.uk)

sportsequip.co.uk and Astroturf® are registered trademarks © sportsequip.co.uk 2025

